




# Installation Instructions for AV/VC One Wall Brace Kit

AVS/021/WBK1

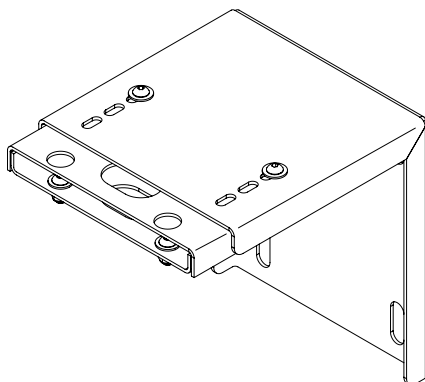


REFER ALSO TO MAIN  
INSTRUCTIONS FOR AV/VC  
ONE STAND INSTALLATION



## PARTS INCLUDED:

AVS/021/WBK1

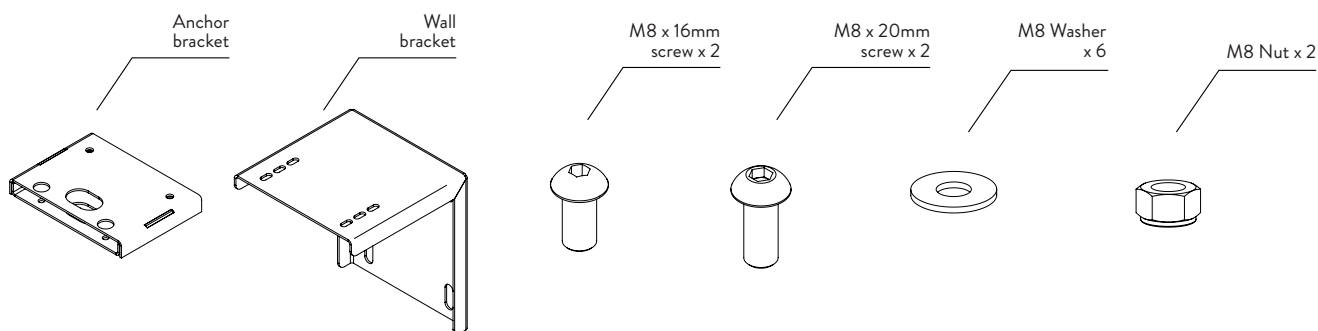

## ⚠ IMPORTANT

- Maximum screen size to be mounted:
  - Single screen installation: 80" max size. 60kg (132lbs) max weight.
  - Dual screen installation: 65" max size. 60kg (132lbs) max weight.
- Note that screen sizes of 65" to 80" may be mounted in dual screen configuration but only if the AV/VC One is stabilised by securing to the wall or building structure using the accessory 'AV/VC One Wall Brace Bracket' (Product code: AVS/021/WBK1)
- It is recommended that screens are removed before moving the AV/VC One unit.

## ⚠ WARNING

- Use with products heavier than the maximum weights indicated may result in instability causing possible injury.
- Correct installation is essential to safe and reliable operation of the AV/VC One product and falls outside the scope of responsibility of Colebrook Bosson Saunders. Please follow assembly instructions carefully.
- Do not use this product for any purpose other than that for which it was designed.
- Ensure that floor or wall surface is strong enough to support the weight of the fully-loaded AV/VC One and that the floor surface is flat and level.
- Do not install AV/VC One outdoors or in environments where it will be directly exposed to moisture or highwinds.
- Follow the manufacturer's guidance for mounting of monitors, displays and other equipment.
- Please take care to avoid trapping fingers when installing or adjusting the product.

## ⚠ ELECTRICAL SAFETY

- Safe installation of electrical equipment is the responsibility of the installer.
- Colebrook Bosson Saunders recommends that only double-insulated electrical equipment and cables are installed in AV/VC One unit.

## ⚠ MAINTENANCE AND INSPECTION


- Ensure all screws and fixings are fully tightened and occasionally re-tighten if necessary.
- Clean with a dampcloth. DO NOT use solvents.

## ⚠ DISCLAIMER

As part of Colebrook Bosson Saunders ongoing product improvement programme, the design of products may change without prior notice and details may vary from those illustrated.



1.1 REMOVE BACK PANEL

**⚠ IMPORTANT NOTE**  
Key must be inserted in lock to open back panel.

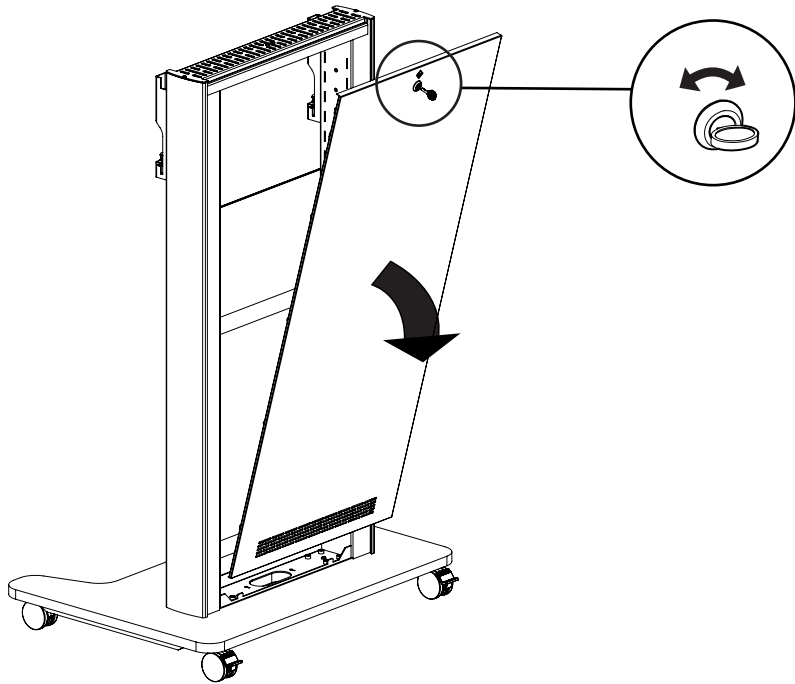


1.2 ASSEMBLE ANCHOR BRACKET TO AV/VC ONE

**⚠ IMPORTANT NOTE**  
Ensure washers are used.

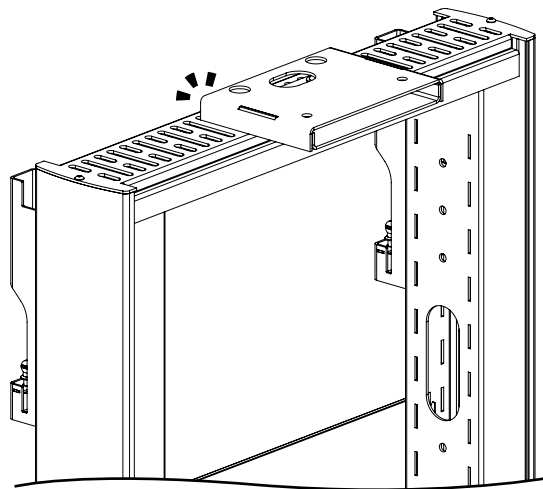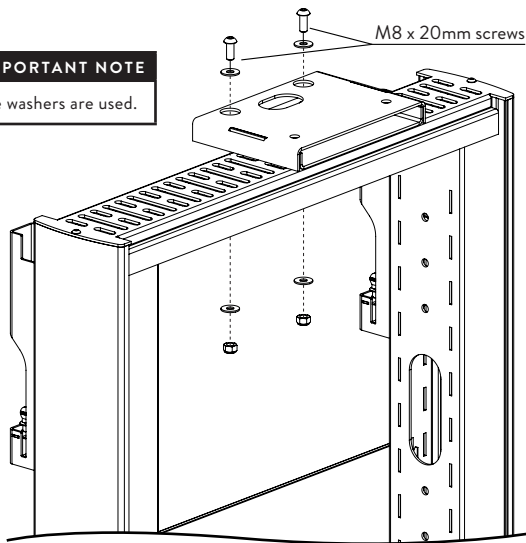


1.3 FULLY TIGHTEN FIXING SCREWS

**⚠ IMPORTANT NOTE**  
Ensure both screws are fully tightened.

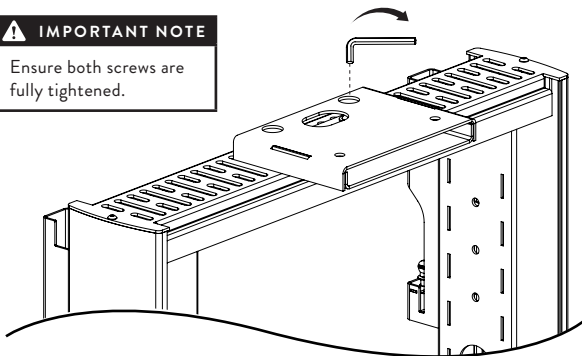


1.4 REFIT AV/VC ONE BACK PANEL

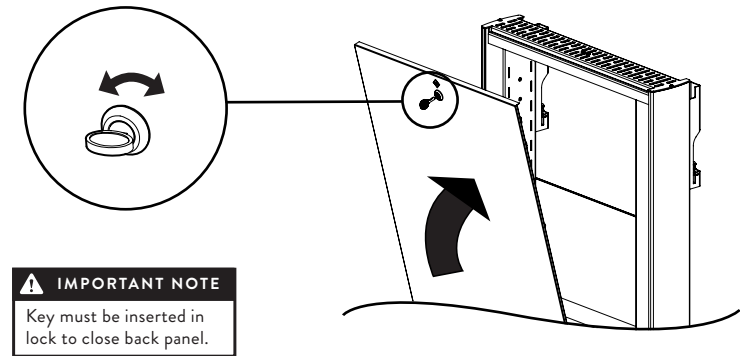

**⚠ IMPORTANT NOTE**  
Key must be inserted in lock to close back panel.

## 1.5 A


Wall bracket should be positioned so that the unit anchor bracket can be pushed easily inside.

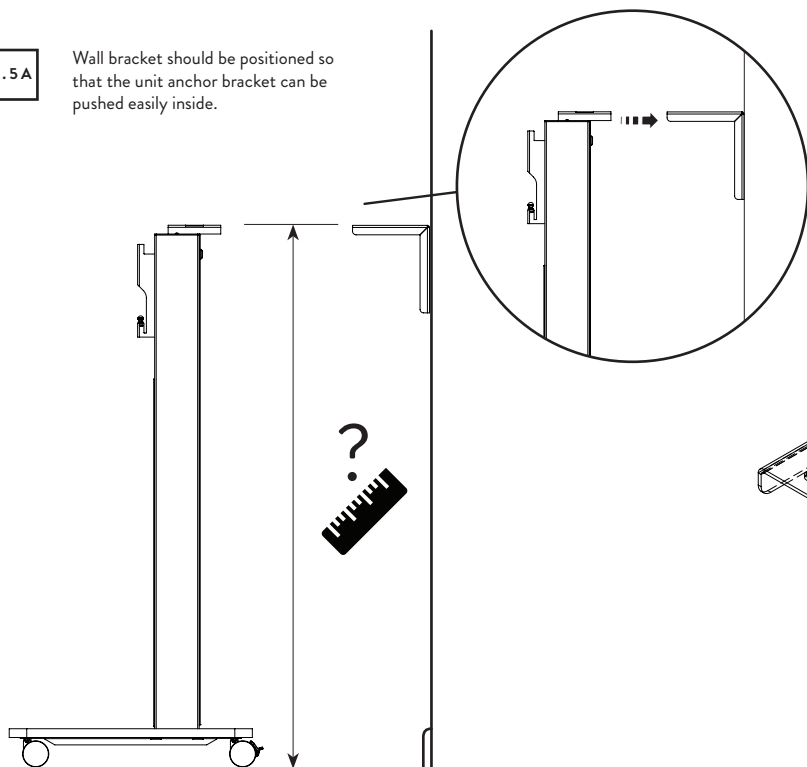

## 1.5 B


Mark fixing hole positions in centre of elongated holes.

When bracket is fixed this will permit a small amount of vertical adjustment to optimise the fit with the height of the AV/VC One unit.

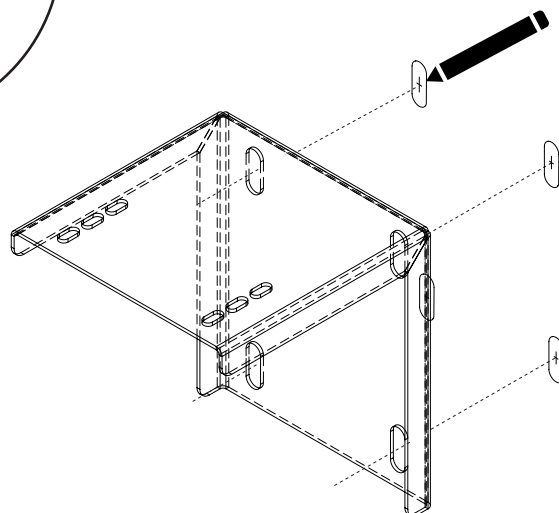

## 1.6

## FIX WALL BRACKET TO WALL / BUILDING STRUCTURE

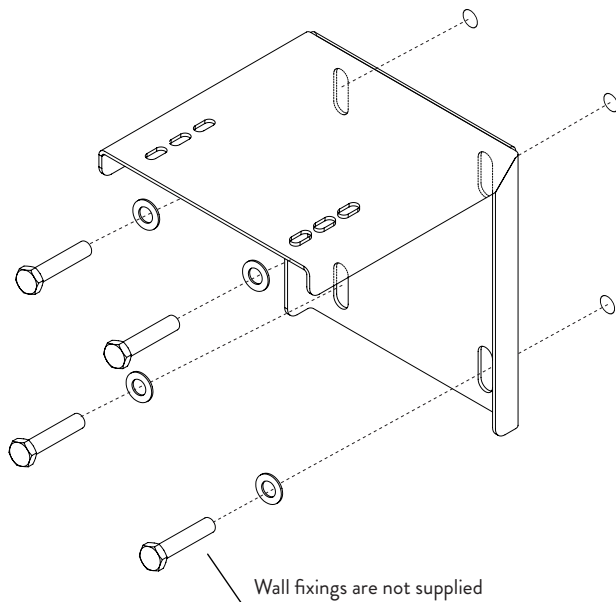
**! IMPORTANT NOTE**

It is the installer's responsibility to ensure that the wall fixings used are suitable for the surface/structure to which the bracket is being mounted and are appropriate to the potential loads.

Suitable washers/load spreaders should always be used to spread the load over the elongated mounting holes.


## 2.1 PUSH THE AV/VC ONE UNIT INTO THE WALL BRACKET

### ⚠ IMPORTANT NOTE

It is advised to install any required equipment into the AV/VC One column before attaching the unit to the wall bracket.

### ⚠ IMPORTANT NOTE


Do not mount screen(s) until AV/VC One is secured to the wall bracket. You may wish to pre-install any necessary cabling in preparation for screen mounting.

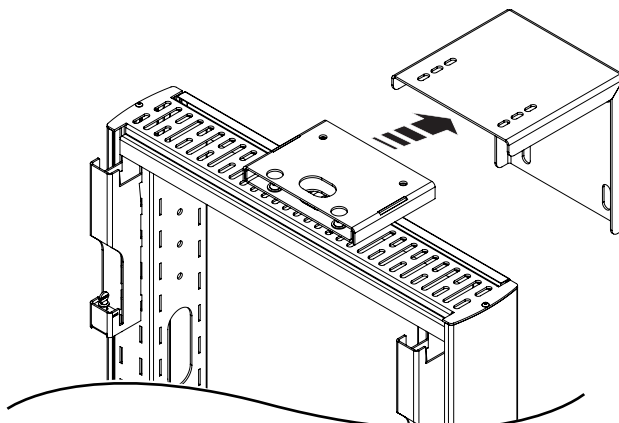

### ⚠ IMPORTANT NOTE

The AV/VC One unit should be moved carefully so that the anchor bracket slides easily into the wall bracket.


## 2.2 FIX AV/VC ONE UNIT TO WALL BRACKET

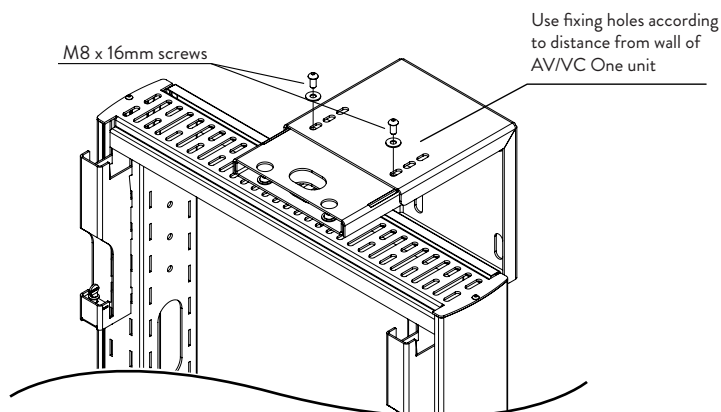

### ⚠ IMPORTANT NOTE

Ensure washers are used.

## 2.3 FULLY TIGHTEN THE FIXING SCREWS

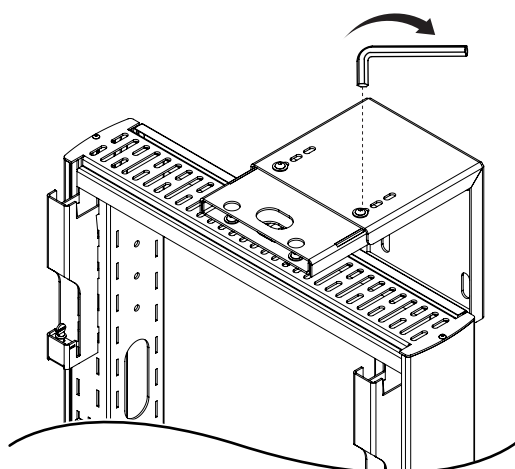


### ⚠ IMPORTANT NOTE

Ensure both screws are fully tightened.


## 3.1 LOOSEN THE FIXING SCREWS

### ⚠ IMPORTANT NOTE


Dismount screen(s) before detaching AV/VC One from the wall bracket.

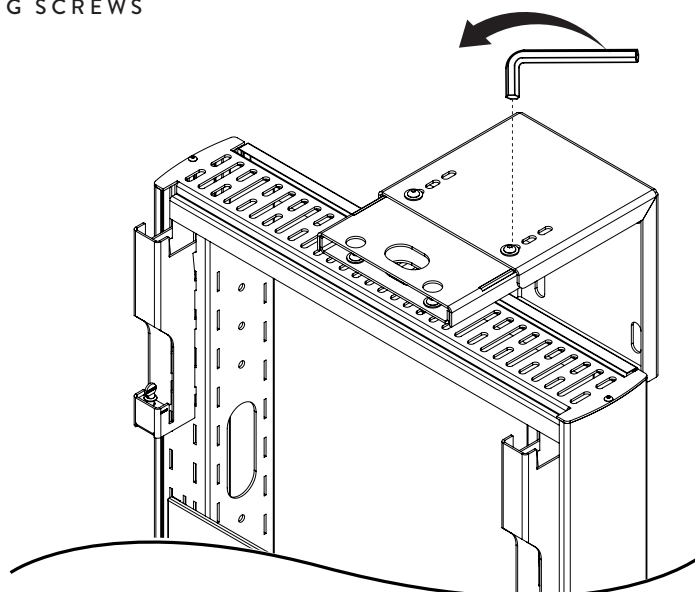

## 3.2 REMOVE FIXING SCREWS

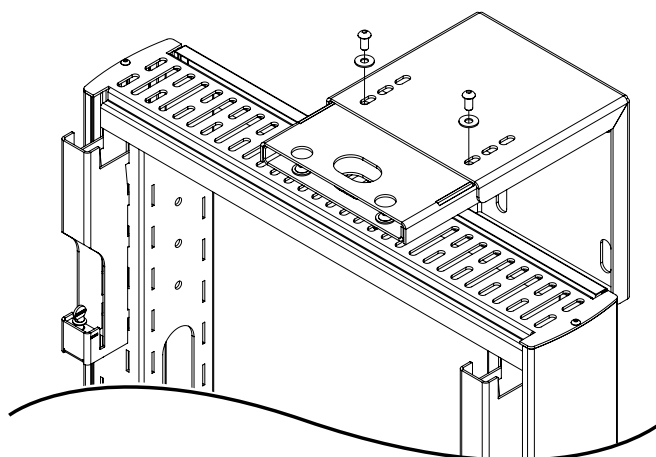

## 3.3 WITHDRAW AV/VC ONE UNIT FROM WALL BRACKET

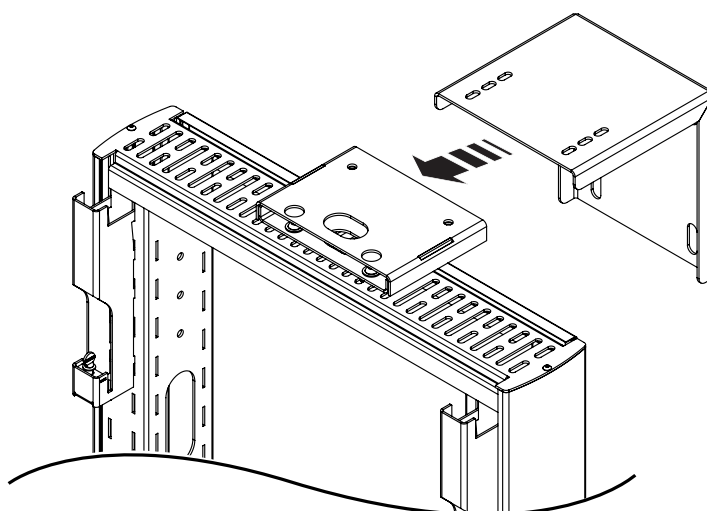

### ⚠ IMPORTANT NOTE

The AV/VOne unit should be moved carefully so that the anchor bracket slides easily out of the wall bracket.