




Installation Instructions for AV/VC Intro Vesa Extension kit

AVS/031/EXT1

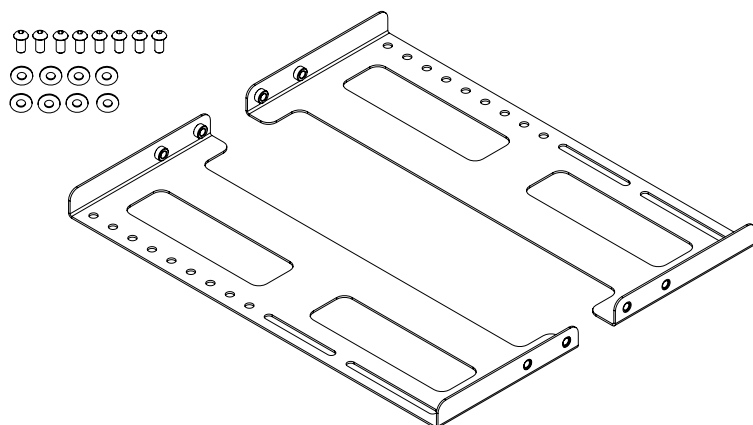

**REFER ALSO TO MAIN
INSTRUCTIONS FOR AV/VC
INTRO STAND INSTALLATION**


PARTS INCLUDED:

AVS/031/EXT1

M8 Screws x8



M8 Washers x8

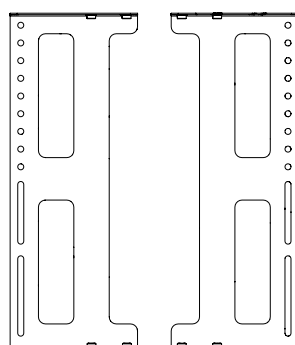

Extension Brackets x2

⚠ WARNING

- Single screen installation: 80" max size. 60kg (132lbs) max weight.
- Use with products heavier than the maximum weights indicated may result in instability causing possible injury.
- Correct installation is essential to safe and reliable operation of the AV/VC Intro product and falls outside the scope of responsibility of Colebrook Bosson Saunders. Please follow assembly instructions carefully.
- Do not use this product for any purpose other than that for which it was designed.
- Ensure that floor or wall surface is strong enough to support the weight of the fully-loaded AV/VC Intro and that the floor surface is flat and level.
- Do not install AV/VC Intro outdoors or in environments where it will be directly exposed to moisture or high winds.
- Follow the manufacturer's guidance for mounting of monitors, displays and other equipment.
- Please take care to avoid trapping fingers when installing or adjusting the product.

⚠ ELECTRICAL SAFETY

- Safe installation of electrical equipment is the responsibility of the installer.
- Colebrook Bosson Saunders recommends that only double-insulated electrical equipment and cables are installed in AV/VC Intro unit.

⚠ MAINTENANCE AND INSPECTION

- Ensure all screws and fixings are fully tightened and occasionally re-tighten if necessary.
- Clean with a damp cloth. DO NOT use solvents.

⚠ DISCLAIMER

As part of Colebrook Bosson Saunders ongoing product improvement programme, the design of products may change without prior notice and details may vary from those illustrated.


PATENTS

Colebrook Bosson Saunders hold a number of patents and other intellectual property rights covering our products and processes. You can find patent information on our website at:
www.colebrookbossonsaunders.com/patents




1.1

ASSEMBLE EXTENSIONS TO SCREEN MOUNT BRACKET

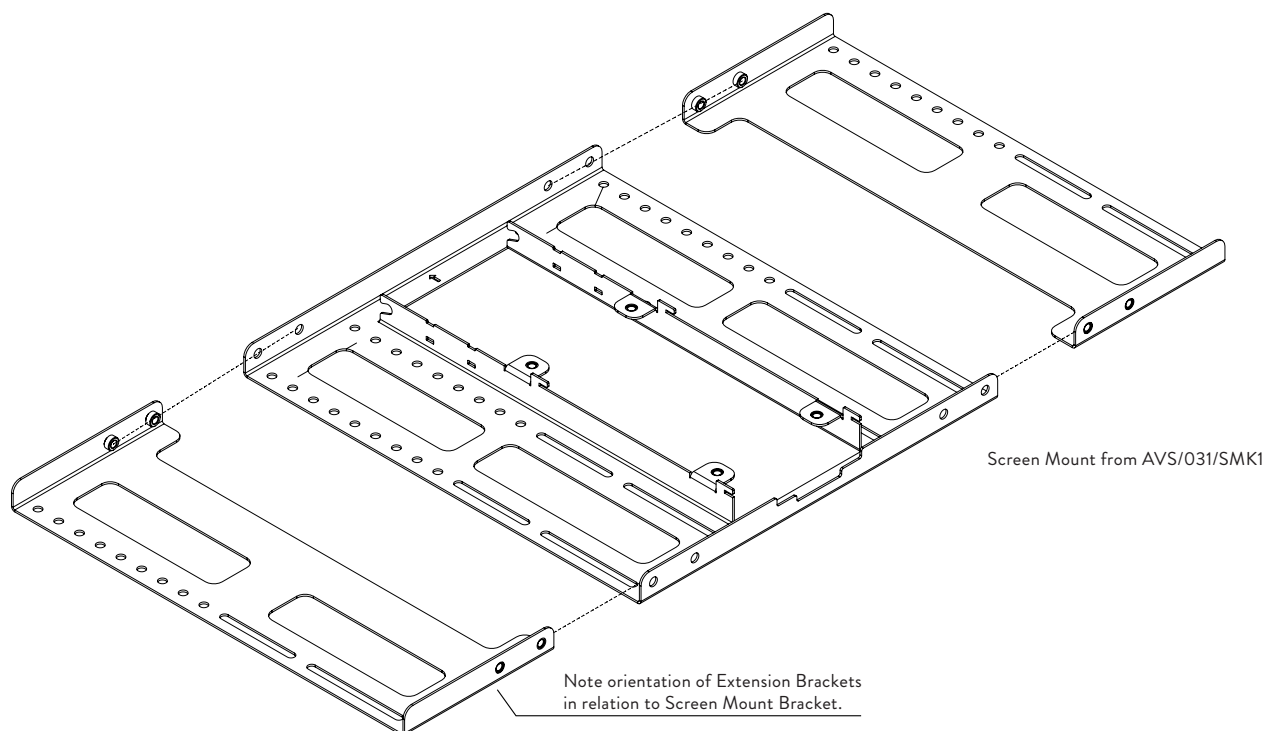

1.2


INSERT ALL FIXINGS AND FULLY TIGHTEN

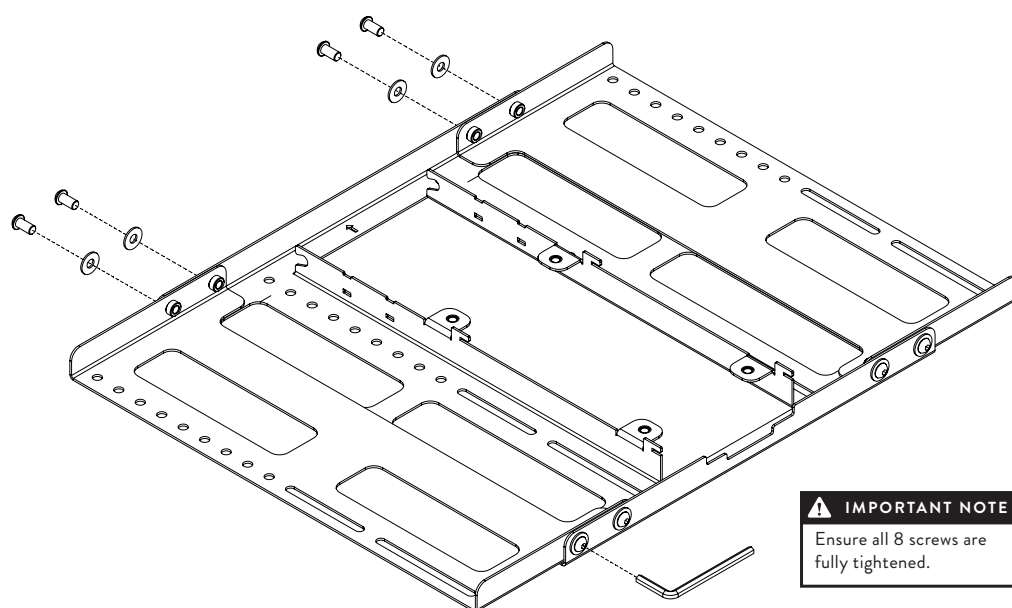

IMPORTANT NOTE
Ensure all 8 screws are fully tightened.



2.1

FIX SCREEN MOUNT TO SCREEN USING FIXTURES FROM AVS/031/SMK1

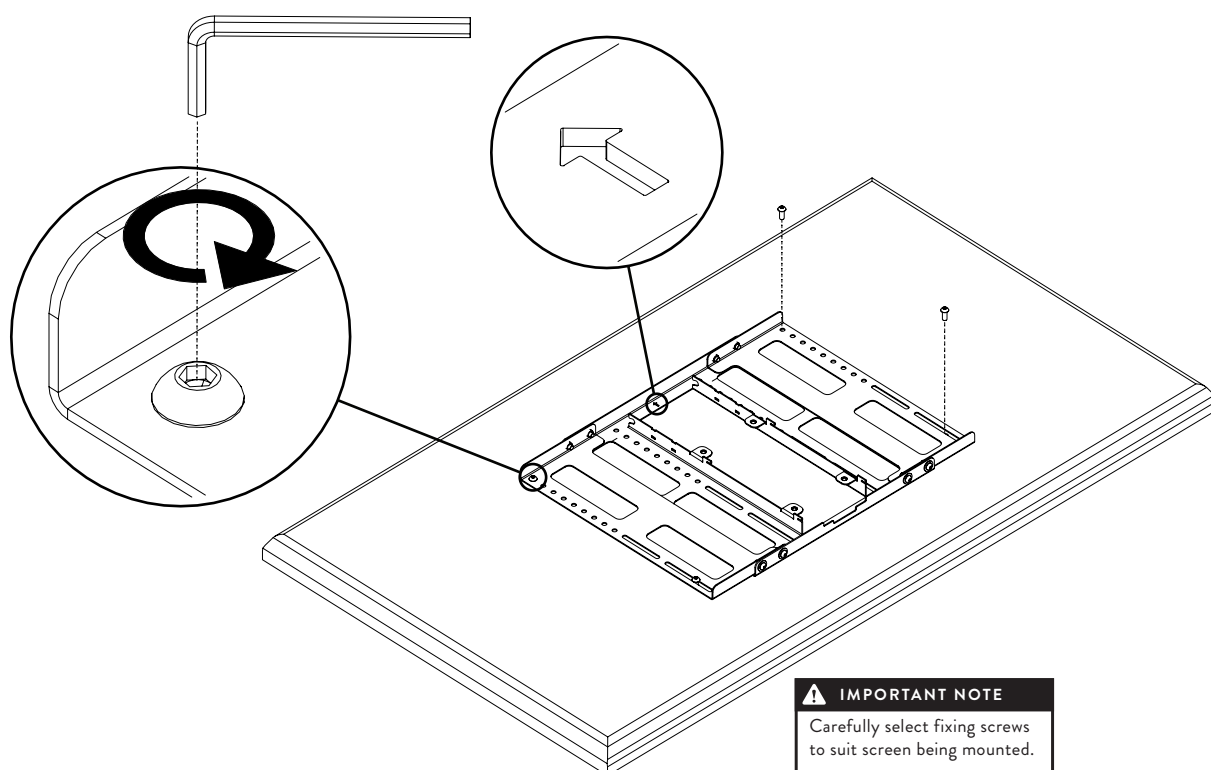

2.2

YOUR EXTENSION KIT INSTALL IS NOW COMPLETE

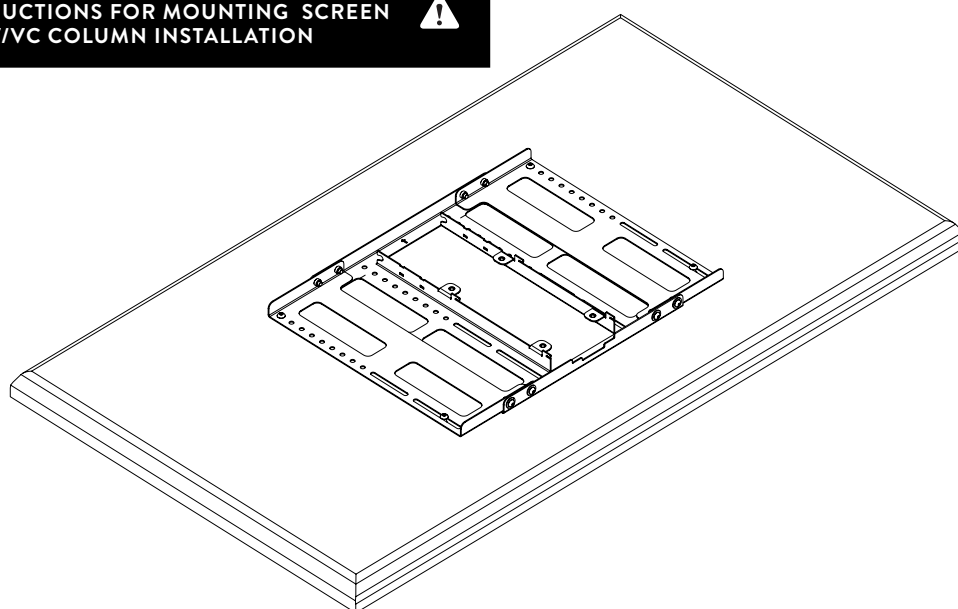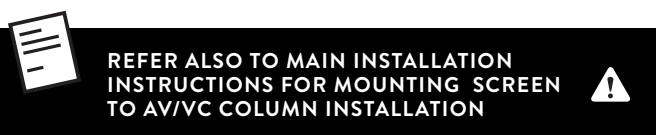

PLEASE CONSIDER LEAVING THESE INSTRUCTIONS WITH THE UNIT
IF FURTHER INSTALLATION MAY BE REQUIRED BY OTHERS

