


# Universal Top Mount Clamp

UNI/TAC/001



1

Place the top mount plate on desktop


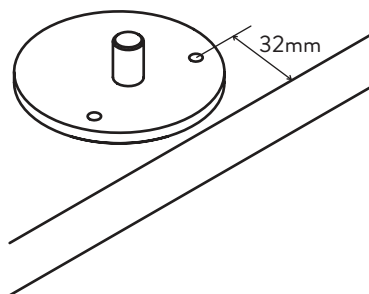


2

Fit spacer onto clamp bracket

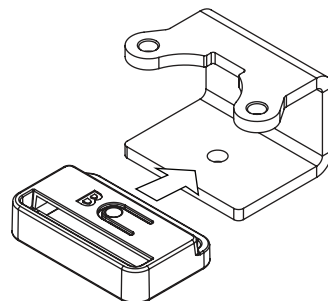

A Facing up  
12-18mm surface thickness




B Facing up  
18-25mm surface thickness




3

Fit clamp around worksurface and insert screws into clamp bracket aligning them with the holes on the clamp plate

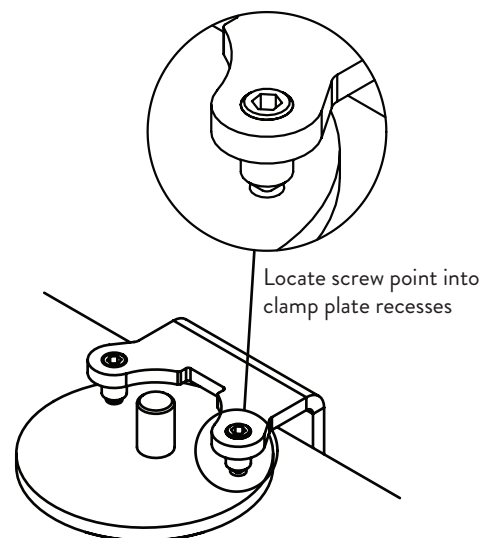


4

Tighten clamp screws

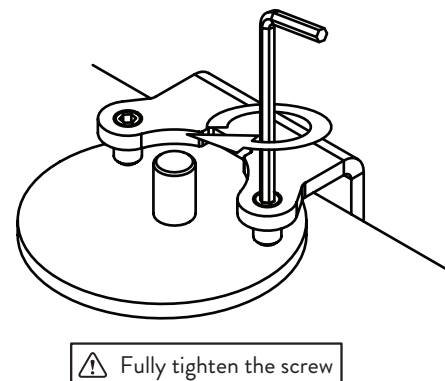

5

Fit cover onto clamp before mounting the post

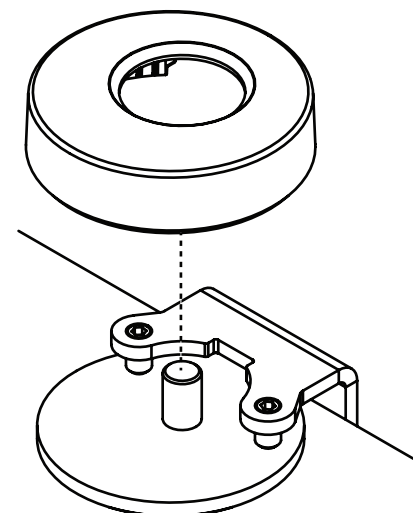

## WARNING

- Do not use this product for any purpose other than that for which it was designed
- Ensure desk/worksurface is suitable to take the weight of the arm/s and monitors
- Supported weight must not exceed the maximum load per arm
- Take care when installing as fingers could become trapped

## MAINTENANCE AND INSPECTION

- Ensure all screws are tightened and occasionally adjust if needed
- Ensure arm is pushed fully down onto the clamp before installing the monitor(s)
- Clean with a damp cloth, NO solvents

## DISCLAIMERS

- The use of power tools, lever bars or excessive force during the installation, or re-configuration of the product will invalidate your guarantee
- Failure to observe the recommendations in the use, and configuration of these products may affect your guarantee
- As a part of Colebrook Bosson Saunders ongoing product improvement programme the design of products may change without prior notice and details may vary from those illustrated

## PATENTS

Colebrook Bosson Saunders hold a number of patents and other intellectual property rights covering our products and processes. You can find patent information on our website at: [www.colebrookbossonsaunders.com/patents](http://www.colebrookbossonsaunders.com/patents)

Please consider leaving these instructions with the product if further installation may be required by others

UNI-TAC-001-INST-B APR 2019